




Please note: Ink cartridges are intended for single use by the manufacturer, but in most cases they can be refilled several times. If the printer shows any connection errors after refilling, this is due to the chip contacts on the cartridge reaching the end of their life.

PLEASE READ THESE INSTRUCTIONS CAREFULLY

1. Place some newspaper or plastic sheet on a suitable surface in case of any mess.
2. Remove the label on the top of the cartridge to see the filling holes.
3. Using the drill bit included, enlarge the filling holes at the top.
See diagram below for which hole contains which colour.
4. Remove the black childproof cap from the bottles of refill ink you wish to use
KEEP THE CAP TO REPLACE LATER so you can safely store any unused ink.
5. Start injecting the ink into the cartridge slowly, gently squeezing the bottle.
Note: You may feel a slight resistance due to the sponge existing in the cartridge
6. The cartridge is full when the ink starts to overflow, stop injecting at this time.
Use a self adhesive sticky dot label to seal this hole.
7. Repeat the previous steps with the different color filling holes. Replace the sticker on the cartridge.
8. Leave the cartridge for one night (12hrs) standing on a non-absorbent surface, to make sure it doesn't leak and to give the ink the time to fully saturate the sponge.
9. Re-Install the cartridge to the printer and run a cleaning cycle.

You may need to turn off the ink level monitor; to turn it off press < and > at the same time, after releasing press in order 4, 5 and 6. A window will appear asking if you want to override the ink level, press 1 for yes.

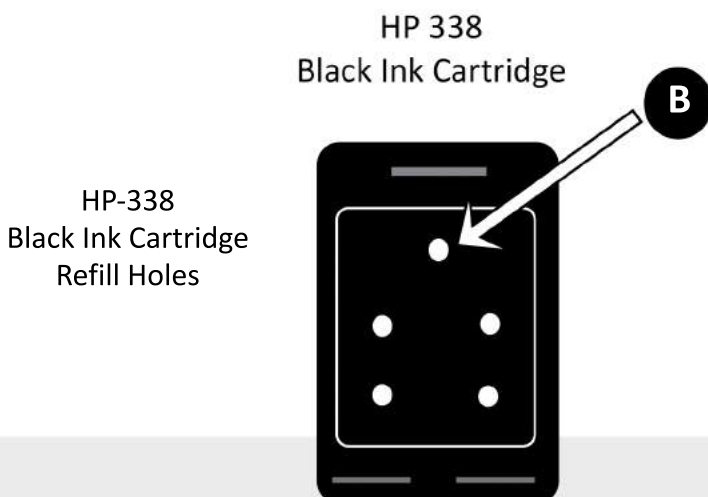

For best results once the cartridge is empty, refill it immediately before any remains of the ink dries. Dried ink on the print head will cause missing lines and images when printing.