



HP-62
HP-62XL




HP-62
HP-62XL

Please note: Ink cartridges are intended for single use by the manufacturer, but in most cases they can be refilled several times. If the printer shows any connection errors after refilling, this is due to the chip contacts on the cartridge reaching the end of their life.

PLEASE READ THESE INSTRUCTIONS CAREFULLY


1. Place some newspaper or plastic sheet on a suitable surface in case of any mess.
2. Remove the label on the top of the cartridge to see the filling holes.
3. Using the drill bit included, enlarge the filling holes at the top. See diagram below for which hole contains which colour.
4. Estimated filling amounts:
 62 Black Cartridge = 3ml / 62XL Black Cartridge = 7ml
 62 Colour Cartridge = 1ml each colour / 62XL Colour Cartridge = 2-3ml each colour
**** Please note these are guides as there may already be ink inside the cartridge already****
5. Remove the black childproof cap from the bottles of refill ink you wish to use
KEEP THE CAP TO REPLACE LATER so you can safely store any unused ink.
6. Start injecting the ink into the cartridge slowly, gently squeezing the bottle.
Note: You may feel a slight resistance due to the sponge existing in the cartridge
7. The cartridge is full when the ink starts to overflow, stop injecting at this time.
 Use a self adhesive sticky dot label to seal this hole.
8. Repeat the previous steps with the different color filling holes. Replace the sticker on the cartridge.
9. Leave the cartridge for one night (12hrs) standing on a non-absorbent surface, to make sure it doesn't leak and to give the ink the time to fully saturate the sponge.
10. Re-Install the cartridge to the printer and run a cleaning cycle.

**HP 62
Black Ink Cartridge**

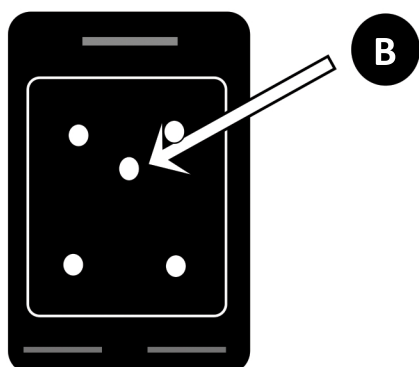

**HP 62
Colour Cartridge**

Please check colour of holes
By putting a cocktail stick into the hole to check the correct colour configuration as cartridges supplied with your printer and shop bought may differ.

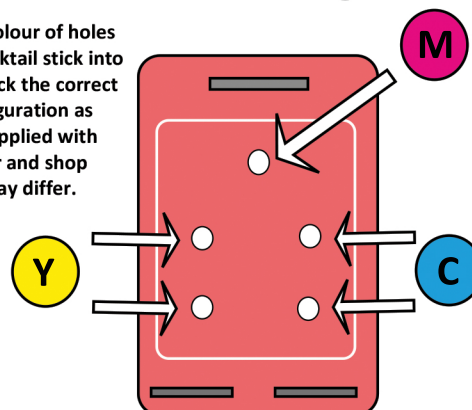

For best results once the cartridge is empty, refill it immediately before any remains of the ink dries. Dried ink on the print head will cause missing lines and images when printing.